



NX-S/O 2/4/8 Series Analog Gateway User Manual



INDEX

Introduction	4	Description of Login Settings	9
Sample Application	4	Login Settings	9
Front Panel	5	General	10
Back Panel	6	Language Settings	10
Main Features	6	Scheduled Reboot	10
System Features	6	Reboot Types	10
Telephony Features	6	Tools	11
SIP Features	6	Reboot Prompt	11
Network	6	Instruction of reboots	11
Physical Information	7	Update Firmware	11
Software	7	Upload and Backup	12
System	7	Factory Reset	12
Status	7	Information	12
Description of Time Settings	8	System Information	12
Login Settings	9	Analog	13

Channel Settings	13	FXS Batch Binding SIP	26
FXO Port Configure	13	Batch Create SIP	26
FXS Port Configure	14	Batch SIP Endpoints	26
Pickup Settings	14	Advanced SIP Settings	27
Pickup Configure	14	Networking	27
Definition of Pickup	15	NAT Settings	27
Dial Matching Table	15	RTP Settings	28
Port Configure	15	Parsing and Compatibility	29
Advanced Settings	16	Security	30
General Configuration	16	Media	30
Instruction of General	16	Sip Account Security	31
Caller ID	17	TLS settings	31
Instruction of Caller ID	17	Instruction of TLS	31
Hardware Gain	17	Routing	32
Instruction of Hardware gain	17	Call Routing Rules	32
Fax Configuration	18	Example of Setup Routing Rule	33
Definition of Fax	18	Definition of Call Routing Rule	33
Country Configuration	18	Advance Routing Rule	33
Definition of Country	19	Definition of Advance Routing Rule	34
Special Function Keys	19	Groups	35
Function keys	19	Definition of Routing Groups	35
SIP	20	Batch Create Rules	35
SIP Endpoints	20	Network	35
SIP Status	20	Network Settings	35
Main Endpoint Settings	20	LAN Settings Interface	36
Anonymous Registration	20	Definition of Network Settings	36
Register to Gateway	21	DNS Interface	37
Register to Server	21	Definition of DNS Settings	37
Definition of SIP Options	22	VPN Settings	37
Advanced Registration Options	23	VPN Interface	37
Call Settings	23	DDNS Settings	37
Advanced: Signaling Settings	23	Toolkit	38
Advanced: Timer Settings	24	Definition of Channel Recording	38
Media Settings	25	Advanced	38
FXS Batch Binding SIP	26	Asterisk API	38


Definition of Asterisk API	38
Asterisk CLI	40
Definition of Asterisk API	40
Asterisk File Editor	40
Configuration Files List	40
Logs	40
Log Settings	40
Definition of LOG	40
System	42
System Logs Output	42
CDR	42

INTRODUCTION


The NX-S/O 2/4/8 series Analog Gateway, is an open-source asterisk-based Analog VoIP Gateway solution for SMBs and SOHOs. With a friendly GUI and unique modular design, users can easily set up their customized Gateway. Also, secondary development can be completed through AMI (Asterisk Management Interface).

The NX-S/O 2/4/8 Analog Gateways are developed for interconnecting a wide selection of codecs including G.711A, G.711U, G.729A, G.722, G.726, iLBC. The NX-S/O 2/4/8 series use standard SIP protocol and are compatible with Leading VoIP platforms, IPPBX and SIP servers such as Asterisk, Issabel, 3CX, FreeSWITCH, BroadSoft and VOS VoIP operating platform.

Sample Application

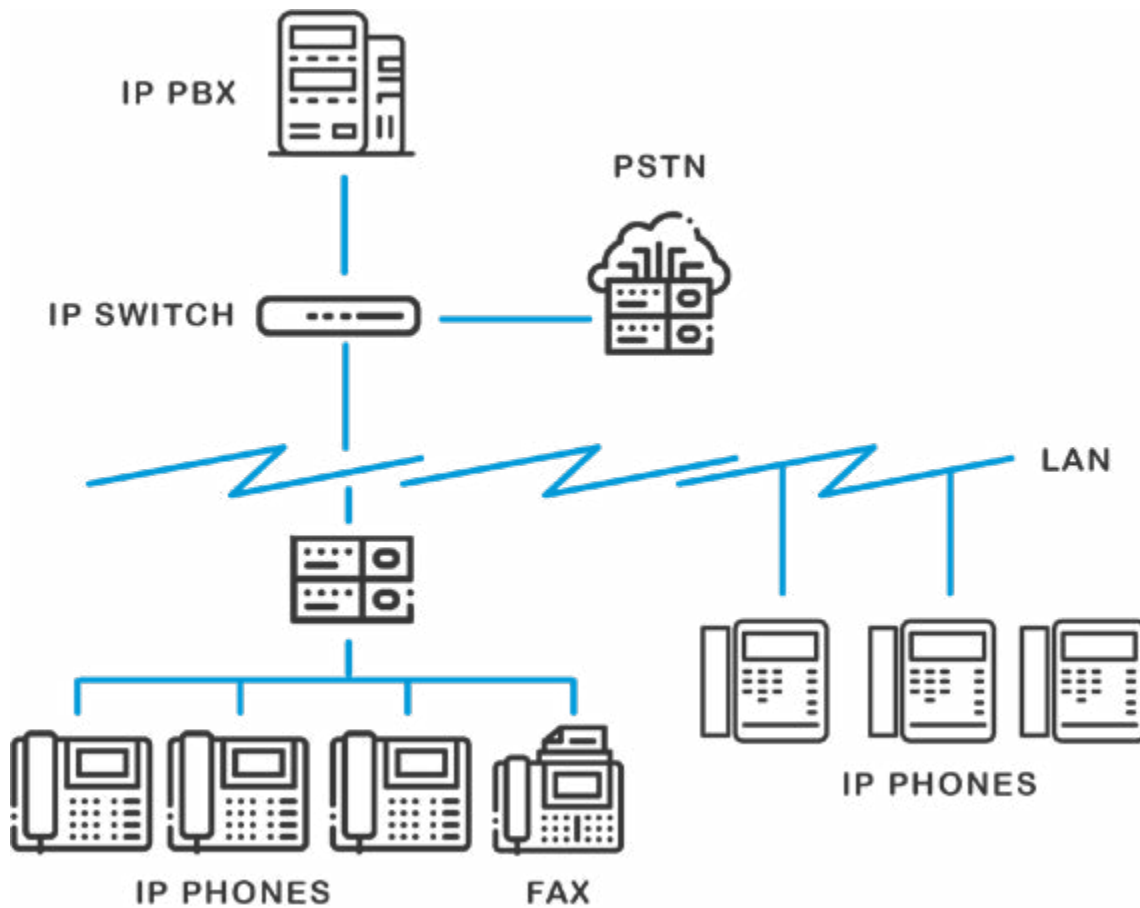

Front Panel

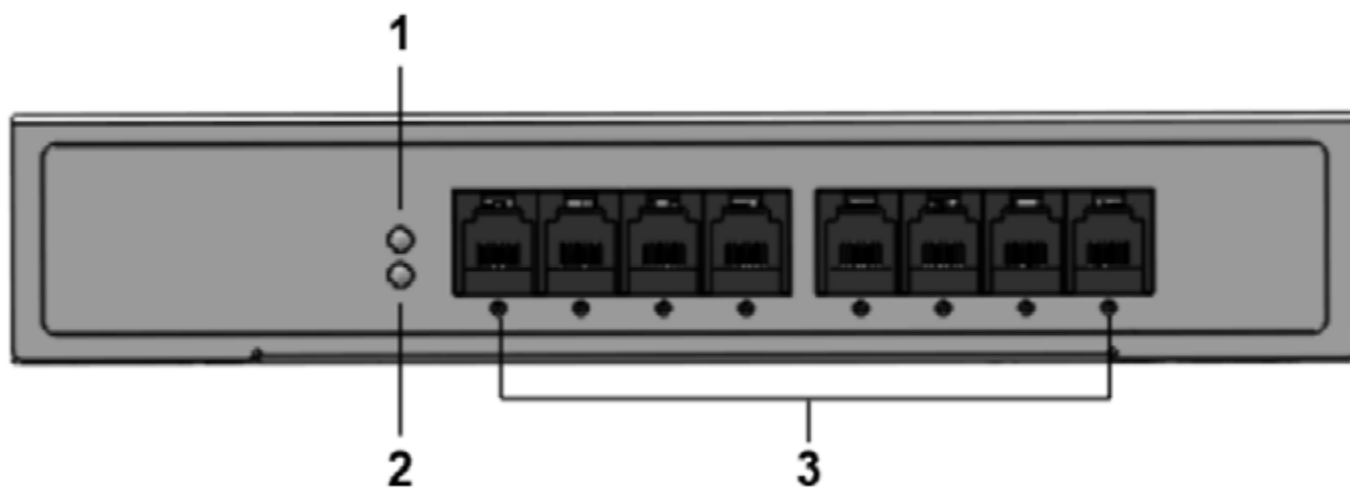


1: Power Indicator

2: System LED

3: Analog Telephone Interfaces and corresponding Channels State Indicators

Back Panel

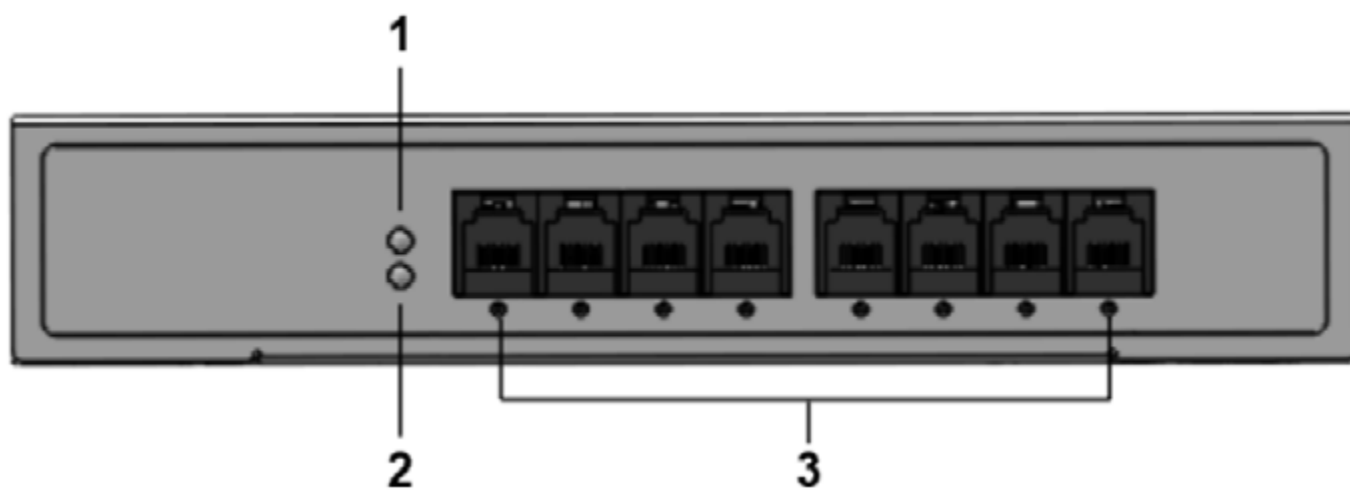

1: Power interface

2: Reset button

3: Ethernet ports and indicators

MAIN FEATURES

System Features

- NTP time synchronization and client time synchronization
- Support modify username and password for web login
- Update firmware online, backup/restore configuration file
- Abundant Log Info, Automatically Reboot, Call status display
- Language selection (Chinese/English)
- Open API interface (AMI), support for custom scripts, dialplans
- Support SSH remote operation and restore the factory settings

Telephony Features

- Support Volume adjustment, Gain adjustment, call transfer, call hold, call waiting, call forward, Caller ID display
- Three way calling, Call transfer, Dial-up matching table
- Support T.38 fax relay and T.30 fax transparent, FSK and DTMF signaling
- Support Ring cadence and frequency setting, WMI (Message Waiting Indicator)
- Support Echo cancellation, Jitter buffer
- Support customizable DISA and other applications

SIP Features

- Support add, modify & delete SIP Accounts, batch add, modify & delete SIP Accounts
- Support multiple SIP registrations: Anonymous, Endpoint registers with this gateway, This gateway registers with the endpoint
- SIP accounts can be registered to multiple servers

Network

- Network type: Static IP, Dynamic
- Support DDNS, DNS, DHCP, DTMF relay, NAT
- Telnet, HTTP, HTTPS, SSH
- VPN client
- Network Toolbox

Physical Information

Weight	637g
Size	19cm*3.5cm*14.2cm
Temperature	-20~70° C (Storage)
	0~50° C (Operation)
Operation humidity	10%~90% non-condensing
Power source	12V DC/2A
Max power	12W

SOFTWARE

Default IP: 172.16.99.1

Username: admin

Password: admin

Please enter the default IP in your browser to scan and configure the module you want.

SYSTEM

Status

On the "Status" page, you will see Port/SIP/Routing/Network information and status.


The screenshot displays the 'Status' page of a device, organized into four main sections: Port Information, SIP Information, Routing Information, and Network Information.

- Port Information:** A table with columns: Port, Name, Type, User Status (Up/Down), and Port Status. It lists ports 1 through 8, all with 'Up' status.
- SIP Information:** A table with columns: Extension Name, User Name, Host, Registration, SIP Status, and Extension Code. It lists extensions 9901 through 9908, with various registration and SIP statuses.
- Routing Information:** A simple table with columns: Rule Name, Rule, and To.
- Network Information:** A table with columns: Name, MAC Address, IP Address, Mask, Gateway, SIP Proxy, and SIP Server. It lists the LAN interface with its respective network details.

Description of Time Settings

Options	Definition
System Time	Your gateway system time.
Time Zone	The world time zone. Please select the one which is the same or the closest as your city.
POSIX TZ String	Posix time zone strings.
NTP Server 1	Time server domain or hostname. For example, [time.asia.apple.com].
NTP Server 2	The first reserved NTP server. For example, [time.windows.com]. The second reserved NTP server. For example, [time.nist.gov].
NTP Server 3	The second reserved NTP server. For example, [time.nist.gov].
Auto-Sync from NTP	Whether enable automatically synchronize from NTP server or not. ON is enable, OFF is disable this function.
Sync from NTP	Sync time from NTP server.
Sync from Client	Sync time from local machine.

For example, you can configure as shown below:

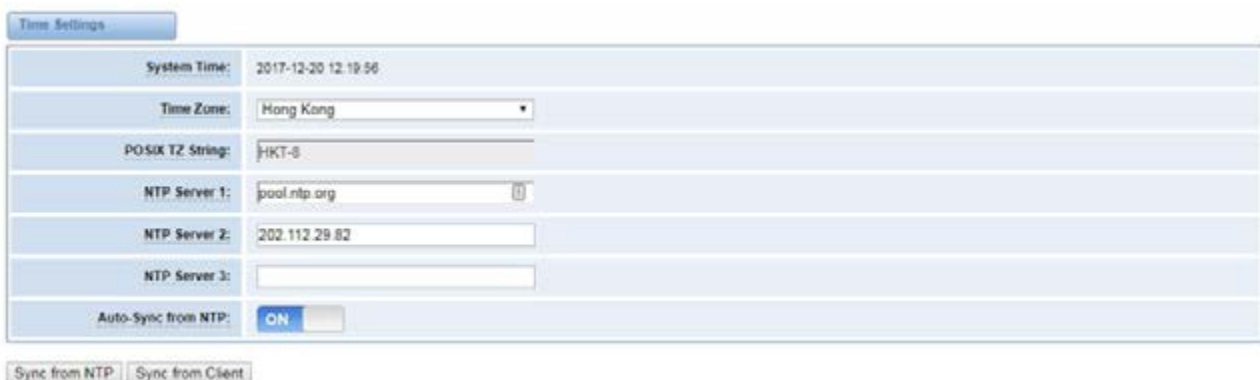

The screenshot shows a 'Time Settings' window with the following configuration:

- System Time: 2017-12-20 12:19:56
- Time Zone: Hong Kong
- POSIX TZ String: HKT-8
- NTP Server 1: pool.ntp.org
- NTP Server 2: 202.112.29.82
- NTP Server 3: (empty)
- Auto-Sync from NTP: ON

At the bottom, there are two buttons: 'Sync from NTP' and 'Sync from Client'.

You can set your gateway time Sync from NTP or Sync from Client by pressing different buttons.

LOGIN SETTINGS

Your gateway doesn't have administration roles. All you can do is reset your username and password to manage your gateway. You can modify both your "Web Login Settings" and "SSH Login Settings". If you have changed these settings, you don't need to log out, just re-enter your new user name and password.

Description of Login Settings

Options	Definition
User Name	Define your username and password to manage your gateway, without space here. Allowed characters "-_+. < >&0-9a-zA-Z". Length: 1-32 characters.
Password	Allowed characters "-_+. < >&0-9a-zA-Z". Length: 4-32 characters.
Confirm Password	Please input the same password as 'Password' above.
Login Mode	Select the mode of login.
HTTP Port	Specify the web server port number.
HTTPS Port	Specify the web server port number.
Port	SSH login port number.

Login Settings

The screenshot displays two configuration sections. The top section, titled "Web Login Settings", includes fields for "User Name" (admin), "Password" (masked), "Confirm Password" (masked), "Login Mode" (http and https), "HTTP Port" (80), and "HTTPS Port" (443). The bottom section, titled "SSH Login Settings", includes an "Enable" toggle (ON), "User Name" (admin), "Password" (masked), and "Port" (12345).

Note: Whenever you do some changes, do not forget to save your configuration.

GENERAL

Language Settings

You can choose different languages for your system. If you want to change the language, you must switch the “Advanced” option on as shown below, and “Download” your current language package. After that, you can modify the package with the language you need. Upload your modified packages, “Choose File” and “Add”.

Language Settings	
Language:	English ▾
Advanced:	<input checked="" type="checkbox"/> ON
Language Debug:	<input type="checkbox"/> TURN ON <input type="checkbox"/> TURN OFF
Download:	Download selected language package. <input type="button" value="Download"/>
Delete:	Delete selected language. <input type="button" value="Delete"/>
Add New Language:	New language Package: <input type="button" value="选择文件"/> 未选择任何文件 <input type="button" value="Add"/>

Scheduled Reboot

If switched on, you can manage your gateway to reboot automatically. There are four reboot types for you to choose, “By Day, By Week, By Month and By Running Time”.

Reboot Types

Scheduled Reboot	
Enable:	<input checked="" type="checkbox"/> ON
Reboot Type:	By Week ▾
Week:	Tue ▾
Time:	Hour: 14 ▾ Minute: 16 ▾

TOOLS

On the "Tools" pages, there are reboot, update, upload, backup and restore options. You can choose system reboot and Asterisk reboot separately.

Reboot Prompt

Scheduled Reboot

Enable:	<input checked="" type="checkbox"/> ON
Reboot Type:	By Week
Week:	Tue
Time:	Hour: 14 Minute: 16

If you press "Yes", your system will reboot and all current calls will be dropped. Asterisk Reboot is the same.

INSTRUCTION OF REBOOTS

Options	Definition
System Reboot	This will turn off your gateway and then turn it back on. This will drop all current calls.
Asterisk Reboot	This will restart Asterisk and drop all current calls.

We offer two kinds of updates, you can choose System Update or System Online Update. System Online Update is an easier way to update your system.

Update Firmware

Update Firmware

New system file:

New system file is downloaded from official website and update system.

If you want to store your previous configuration, you can first backup configuration, then you can upload configuration directly. Notice, the version of backup and current firmware should be same, otherwise, it would not take effect.

Upload and Backup

Upload Configuration

New configuration file: No file chosen

Backup Configuration

Current configuration file version: 1.0.1

Factory Reset

To factory reset your gateway simply press the button as shown below and your gateway will be reset to the factory status.

Restore Configuration

This will cause all the configuration files to back to default factory values! And reboot your gateway once it finishes.

Information

On the "Information" page, you will find some basic information about your gateway. You can see the software and hardware version, storage usage, memory usage and some help information.

System Information

Model Name:	
Software Version:	1.1.14
Hardware Version:	1.0.0
Slot Number:	1
Storage Usage:	1.7MB/3.5M (3%)
Memory Usage:	60.3877 % Memory Clear
Build Time:	2017-12-12 16:31:16
Contact Address:	
Tel:	
Fax:	
E-Mail:	
Web Site:	
System Time:	2017-12-20 13:51:31
System Uptime:	0 days 02:10:41

ANALOG

You can see information about your ports on this page.

Channel Settings

Port	Type	Name	Line Status/Sip Account	Port Status	Actions
1	FXO	board1-port1	Disconnected	OnHook	
2	FXO	board1-port2	Disconnected	OnHook	
3	FXO	board1-port3	Disconnected	OnHook	
4	FXO	board1-port4	Disconnected	OnHook	
5	FXS	board1-port5	8005	OnHook	
6	FXS	board1-port6	8006	OnHook	
7	FXS	board1-port7	8007	OnHook	
8	FXS	board1-port8	8008	OnHook	

On this page, you can see every port status, and click the action button  to configure the port.

FXO Port Configure

General

Port type: FXO

Name:

Rx gain:

Tx gain:

Ring timeout:

Call ID

Use callerid: ON

Hide callerid: OFF

CEP signaling:

DMO: OFF

CEP start signal:

Priority

Answer on polarity switch: OFF

Hangup on polarity switch: OFF

Polarity on answer delay:

Delay reply 200 OK switch: OFF

FXS Port Configure

General	
Port type:	FXS
Name:	<input type="text" value="fxs-port8"/>
Rx gain:	<input type="text" value="3.0"/>
Tx gain:	<input type="text" value="3.0"/>
Ring timeout:	<input type="text" value="100"/>
Sp. Account:	None
Fallout No:	None

Caller ID	
Caller ID:	<input type="text" value="8006"/>
Full name:	<input type="text" value="Channel 8006"/>
CID signaling:	tel
DND:	<input type="checkbox"/> OFF

Call features	
Call waiting:	<input checked="" type="checkbox"/> ON
Three way calling:	<input checked="" type="checkbox"/> ON
Call transfer:	<input checked="" type="checkbox"/> ON

PICKUP SETTINGS

Call pickup is a feature used in a telephone system that allows one to answer someone else's call. You can set the "Time Out" and "Number" parameters either globally or separately for each port. The feature is accessed by pressing a special sequence of numbers which you set as "Number" parameter on the telephone set when it is enabled this function.

Pickup Configure

Pickup Settings			
Enable:	<input checked="" type="checkbox"/> ON		
Time Out:	<input type="text" value="3000"/>		
Number:	<input type="text" value="**8006"/>		
5	<input type="text" value="Disabled"/>	Time Out	<input type="text"/>
6	<input type="text" value="Disabled"/>	Time Out	<input type="text"/>
7	<input type="text" value="Disabled"/>	Time Out	<input type="text"/>
8	<input checked="" type="text" value="Enabled"/>	Time Out	<input type="text"/>

Definition of Pickup

Options	Definition
Enable	ON(enabled),OFF(disabled)
Time Out	Set the timeout, in milliseconds (ms).Note: You can only enter numbers.
Number	Pickup number

DIAL MATCHING TABLE

Dialing rules are used to effectively judge whether the received number sequence is complete, in order to timely end receiving numbers and send out numbers.

The correct use of dial-up rules, helps to shorten the turn-on time of phone calls.

Port Configure

<pre> _01[358]XXXXXXXX _010XXXXXXXX _02XXXXXXXX _0[9-9]XXXXXXXX _11[02-9] _111XX _9[56]XXX _100XX _10[1-9] _12[0-24-9] _1[358]XXXXXXXX _[235-7]XXXXXX _[48][1-9]XXXXXX _[48]0[1-9]XXXXX _[48]00XXXXXX _#XX _+XX ## _X </pre>	<p>Dial Matching rule may be numbers, letters, or combinations thereof. If an rule is prefixed by a '_' character, it is interpreted as a pattern rather than a literal. In patterns, some characters have special meanings:</p> <p>X - any digit from 0-9 Z - any digit from 1-9 N - any digit from 2-9 [1235-9] - any digit in the brackets (in this example, 1, 2, 3, 5, 6, 7, 8, 9) ! - wildcard, causes the matching process to complete as soon as ;it can unambiguously determine that no other matches are possible</p> <p>For example, the rule _NXXXXXX would match normal 7 digit dialings, while _1N0XXXXXX would represent an area code plus phone number preceded by a one.</p>
--	---

ADVANCED SETTINGS

General Configuration

General	
Tone duration:	100
Dial timeout:	180
Codec:	Ulaw
Impedance:	China
Echo cancel tap length:	512
VAD/CNG:	<input type="checkbox"/> OFF
Flash/Wink:	<input checked="" type="checkbox"/> ON
Min flash time:	40
Max flash time:	400
"#" as Ending Dial Key:	<input checked="" type="checkbox"/> ON
Checking SIP Status:	<input type="checkbox"/> OFF

Instruction of General

Options	Definition
Tone duration	How long generated tones (DTMF and MF) will be played on the channel. (in milliseconds)
Dial timeout	Specifies the number of seconds we attempt to dial the specified devices.
Codec	Set the global encoding : mulaw, alaw.
Impedance	Configuration for impedance.
Echo cancel tap length	Hardware echo canceler tap length.
VAD/CNG	Turn on/off VAD/CNG.
Flash/Wink	Turn on/off Flash/wink.
Max flash time	Max flash time.(in milliseconds).
"#"as Ending Dial Key	Turn on/off Ending Dial Key.
Checking SIP Status	Turn on/off SIP Account registration status checking.

Caller ID

▼ Caller ID	
The pattern of sending CID:	send CID after first ring ▼
Waiting time before sending CID:	100
Send polarity reversal(DTMF Only):	<input type="checkbox"/> OFF
Start code(DTMF Only):	
Stop code(DTMF Only):	
Display extension number	<input type="checkbox"/> OFF

Instruction of Caller ID

Options	Definition
The pattern of sending CID	Some countries(UK) have ring tones with different ring tones(ring-ring), which means the caller ID needs to be set later on, and not just after the first ring, as per the default(1).
Waiting time before sending CID	How long we will waiting before sending the CID on the channel.(in milliseconds).
Sending polarity reversal(DTMF Only)	Send polarity reversal before sending the CID on the channel.
Start code(DTMF Only)	Start code.
Stop code(DTMF Only)	Stop code.

Hardware Gain

▼ Hardware gain	
FXO Rx gain:	0
FXO Tx gain:	0
FXS Rx gain:	0 ▼
FXS Tx gain:	0 ▼

Instruction of Hardware gain

Options	Definition
FXS Rx gain	Set the FXS port Rx gain. Range: from -150 to 120. Select -35, 0 or 35.
FXS Tx gain	Set the FXS port Tx gain. Range: from -150 to 120. Select -35, 0 or 35.

Fax Configuration

▼ Fax

Mode:	T.38 ▼
Rate:	14400 ▼
Ecm:	<input type="checkbox"/> OFF

Definition of Fax

Options	Definition
Mode	Set the transmission mode.
Rate	Set the rate of sending and receiving.
Ecm	Enable/disable T.30 ECM (error correction mode) by default.

Country Configuration

▼ Country

Country:	China ▼
Ring cadence:	1000,4000
Dial tone:	450
Ring tone:	450/1000,0/4000
Busy tone:	450/350,0/350
Call waiting tone:	450/400,0/4000
Congestion tone:	450/700,0/700
Dial recall tone:	450
Record tone:	950/400,0/10000
Info tone:	450/100,0/100,450/100,0/100,450/100,0/100,450/400,0/400
Stutter tone:	450+425

Definition of Country

Options	Definition
Country	Configuration for location specific tone indications.
Ring cadence	List of durations the physical bell rings.
Dial tone	Set of tones to be played when one picks up the hook.
Ring tone	Set of tones to be played when the receiving end is ringing.
Busy tone	Set of tones played when the receiving end is busy.
Call waiting tone	Set of tones played when there is a call waiting in the background.
Congestion tone	Set of tones played when there is some congestion.
Dial recall tone	Many phone systems play a recall dial tone after hook flash.
Record tone	Set of tones played when call recording is in progress.
Info tone	Set of tones played with special information messages (e.g., number is out of service.)

SPECIAL FUNCTION KEYS

Function keys SIP

▼ Function Keys

















None Keys Blind Transfer:	<input checked="" type="checkbox"/> ON
Blind Transfer:	<input type="text"/>
Asked Transfer:	<input type="text" value="*38"/>

SIP

SIP Endpoints

This page shows everything about your SIP, you can see status of each SIP.

SIP Status

Endpoint Name	Registration	Credentials	Actions
8000	client	8000@172.16.80.134	 
8001	client	8001@172.16.80.134	 
8002	client	8002@172.16.80.134	 
8003	client	8003@172.16.80.134	 
8004	client	8004@172.16.80.134	 
8005	client	8005@172.16.80.134	 
8006	client	8006@172.16.80.134	 
8007	client	8007@172.16.80.134	 

[Add New SIP Endpoint](#) [Delete](#)

Click on the [Add New SIP Endpoint](#) button to add a new SIP endpoint, and if you want to modify existed endpoints, click on the  button.

Main Endpoint Settings

There are 3 kinds of registration types to choose from. You can choose "Anonymous, Endpoint registers with this gateway or This gateway registers with the endpoint".

You can configure as follows:

If you set up a SIP endpoint by registration "None" to a server, then you can't register other SIP endpoints to this server. (If you add other SIP endpoints, this will cause Out-band Routes and Trunk confusion.)

Anonymous Registration

▼ Main Endpoint Settings

Name:	<input type="text" value="D01"/> <small>*Allowed character must be any of [0-9a-z~!@#%*^*_()-+=], 1 - 32 characters.</small>
User Name:	<input type="text"/> <input checked="" type="checkbox"/> Anonymous
Password:	<input type="password"/>
Registration:	<input type="text" value="None"/>
Hostname or IP Address:	<input type="text" value="172.16.208.33"/>
Backup Hostname or IP Address:	<input type="text"/>
Transport:	<input type="text" value="UDP"/>
NAT Traversal:	<input type="text" value="Yes"/>
SUBSCRIBE for MW:	<input type="text" value="No"/>
VO5 Encryption:	<input type="text" value="No"/>

You can register your SIP endpoint to your gateway and your gateway will work as a server.

Register to Gateway

Main Endpoint Settings	
Name:	301 <small>*Allowed character must be any of [0-9a-zA-Z-!@#%**()_{}+~=], 1 - 32 characters.</small>
User Name:	301 <input type="checkbox"/> Anonymous
Password:	***
Registration:	Endpoint registers with this gateway
Hostname or IP Address:	dynamic
Backup Hostname or IP Address:	
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No
VOS Encryption:	No

You can choose registration by "This gateway registers with the endpoint", it's the same with "None", except for the name and password.

Register to Server

Main Endpoint Settings	
Name:	301 <small>*Allowed character must be any of [0-9a-zA-Z-!@#%**()_{}+~=], 1 - 32 characters.</small>
User Name:	301 <input type="checkbox"/> Anonymous
Password:	***
Registration:	This gateway registers with the endpoint
Hostname or IP Address:	172.16.208.63
Backup Hostname or IP Address:	
Transport:	UDP
NAT Traversal:	Yes
SUBSCRIBE for MWI:	No
VOS Encryption:	No

Definition of SIP Options

Options	Definition
Name	A name which is able to read by human. And it's only used for user's reference.
Username	User Name the endpoint will use to authenticate with the gateway.
Password	Password the endpoint will use to authenticate with the gateway. Allowed characters.
Registration	<p>None—Not registering; Endpoint registers with this gateway—When register as this type, it means the GSM gateway acts as a SIP server, and SIP endpoints register to the gateway;</p> <p>This gateway registers with the endpoint—When register as this type, it means the GSM gateway acts as a client, and the endpoint should be register to a SIP server;</p>
Hostname or IP Address	IP address or hostname of the endpoint or 'dynamic' if the endpoint has a dynamic IP address. This will require registration.
Transport	This sets the possible transport types for outgoing. Order of usage, when the respective transport protocols are enabled, is UDP, TCP, TLS. The first enabled transport type is only used for outbound messages until a Registration takes place. During the peer Registration the transport type may change to another supported type if the peer requests so.
NAT Traversal	<p>Addresses NAT-related issues in incoming SIP or media sessions.</p> <p>No—Use Rport if the remote side says to use it.</p> <p>Force Rport on—Force Rport to always be on.</p> <p>Yes—Force Rport to always be on and perform comedia RTP handling.</p> <p>Rport if requested and comedia—Use Rport if the remote side says to use it and perform comedia RTP handling.</p>

Advanced Registration Options

Options	Definition
Authentication User	A username to use only for registration.
Register Extension	When Gateway registers as a SIP user agent to a SIP proxy (provider), calls from this provider connect to this local extension.
From User	A username to identify the gateway to this endpoint.
From Domain	A domain to identify the gateway to this endpoint.
Remote Secret	A password which is only used if the gateway registers to the remote side.
Port	The port number the gateway will connect to at this endpoint.
Quality	Whether or not to check the endpoint's connection status.
Qualify Frequency	How often, in seconds, to check the endpoint's connection status.
Outbound Proxy	A proxy to which the gateway will send all outbound signaling instead of sending signaling directly to endpoints.
Custom Registry	Custom Registry On / Off.
Enable Outbound proxy to Host	Outbound proxy to Host On / Off.

Advanced: Signaling Settings

Options	Definition
Progress Inband	If we should generate in-band ringing. Always use 'never' to never use in-band signaling, even in cases where some buggy devices might not render it. Valid values: yes, no never. Default: never.
Allow Overlap Dialing	Allow Overlap Dialing: Whether or not to allow overlap dialing. Disabled by default.

Append user=phone to URI	Whether or not to add ‘; user=phone’ to URIs that contain a valid phone number.
Add Q.850 Reason Headers	Whether or not to add Reason header and to use it if it is available.
Honor SDP Version	By default, the gateway will honor the session version number in SDP packets and will only modify the SDP session if the version number change. Turn this option off to force the gateway to ignore the SDP session version number and treat all SDP data as new data. This is required for devices that send non-standard SDP packets (observed with Microsoft OCS). By default this option is on.
Allow Transfers	Whether or not to globally enable transfers. Choosing ‘no’ will disable all transfers (unless enabled in peers or users). Default is enabled.
Allow Promiscuous Redirects	Whether or not to allow 302 or REDIR to non-local SIP address. Note that promiscdir when redirects are made to the local system will cause loops since this gateway is incapable of performing a “hairpin” call.
Max Forwards	Setting for the SIP Max-Forwards header (loop prevention).
Send TRYING on REGISTER	Send a 100 Trying when the endpoint registers.

Advanced: Timer Settings

Options	Definition
Default T1 Timer	This timer is used primarily in INVITE transactions. The default for Timer T1 is 500ms or the measured run-trip time between the gateway and the device if you have qualify=yes for the device.
Call Setup Timer	If a provisional response is not received in this amount of time, the call will auto-congest. Defaults to 64 times the default T1 timer.
Session Timers	Session-Timers feature operates in the following three modes: originate, Request and run session-timers always; accept, run session-timers only when requested by other UA; refuse, do not run session timers in any case.
Minimum Session Refresh Interval	Minimum session refresh interval in seconds. Default is 90secs.

Maximum Session Refresh Interval	Maximum session refresh interval in seconds. Defaults to 1800secs.
Session Refresher	The session refresher, uac or uas. Defaults to uas.
Quality	Whether or not to check the endpoint's connection status.
Qualify Frequency	How often, in seconds, to check the endpoint's connection status.
Outbound Proxy	A proxy to which the gateway will send all outbound signaling instead of sending signaling directly to endpoints.
Custom Registry	Custom Registry On / Off.
Enable Outbound proxy to Host	Outbound proxy to Host On / Off.

Media Settings

Options	Definition
Media Settings	Select codec from the drop down list. Codecs should be different for each Codec Priority.

FXS BATCH BINDING SIP

If you want to bind batch SIP accounts to the FXS port, you can configure it on this page. This is only used with the "This gateway registers with the endpoint" work mode.

FXS Batch Binding SIP

<input type="checkbox"/>	Port	Port Name	User Name	Password	Hostname or IP Address	Port	VOS Encryption	Codec Priority	Support Codec
<input type="checkbox"/>			<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	1	board-1-port1	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	2	board-1-port2	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	3	board-1-port3	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	4	board-1-port4	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾
<input type="checkbox"/>	5	board-1-port5	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.723 ▾	All ▾
<input type="checkbox"/>	6	board-1-port6	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	Solo ▾
<input type="checkbox"/>	7	board-1-port7	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 a-law ▾	All ▾
<input type="checkbox"/>	8	board-1-port8	<input type="text"/>	<input type="text"/>	<input type="text"/> - <input type="text"/>	<input type="text"/>	No ▾	G.711 u-law ▾	All ▾

AutoPassword

Batch Create SIP

If you want add batch SIP accounts, you can configure this page. You can choose all the register mode.

Batch SIP Endpoints

<input type="checkbox"/>	ID	User Name	Password	Hostname or IP Address	Port	Register Mode
<input type="checkbox"/>		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾
<input type="checkbox"/>	8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	client ▾

AutoPassword

ADVANCED SIP SETTINGS

Networking

Options	Definition
UDP Bind Port	Choose a port on which to listen for UDP traffic.
Enable TCP	Enable server for incoming TCP connection (default is no).
TCP Bind Port	Choose a port on which to listen for TCP traffic.
TCP Authentication Timeout	The maximum number of seconds a client has to authenticate. If the client does not authenticate before this timeout expires, the client will be disconnected.(default value is: 30 seconds).
TCP Authentication Limit	The maximum number of unauthenticated sessions that will be allowed to connect at any given time(default is:50).
Enable Hostname Lookup	Enable DNS SRV lookups on outbound calls Note: the gateway only uses the first host in SRV records Disabling DNS SRV lookups disables the ability to place SIP calls based on domain names to some other SIP users on the Internet specifying a port in a SIP peer definition or when dialing outbound calls with suppress SRV lookups for that peer or call.

NAT Settings

Options	Definition
Local Network	Format:192.168.0.0/255.255.0.0 or 172.16.0.0./12. A list of IP address or IP ranges which are located inside a NATed network. This gateway will replace the internal IP address in SIP and SDP messages with the external IP address when a NAT exists between the gateway and other endpoints.
Local Network List	Local IP address list that you added.

Subscribe Network Change Event	Through the use of the <code>test_stun_monitor</code> module, the gateway has the ability to detect when the perceived external network address has changed. When the <code>stun_monitor</code> is installed and configured, <code>chan_sip</code> will renew all outbound registrations when the monitor detects any sort of network change has occurred. By default this option is enabled, but only takes effect once <code>res_stun_monitor</code> is configured. If <code>res_stun_monitor</code> is enabled and you wish to not generate all outbound registrations on a network change, use the option below to disable this feature.
Match External Address Locally	Only substitute the <code>externaddr</code> or <code>externhost</code> setting if it matches
Dynamic Exclude Static	Disallow all dynamic hosts from registering as any IP address. Used for statically defined hosts. This helps avoid the configuration error of allowing your users to register at the same address as a SIP provider.
Externally Mapped TCP Port	The externally mapped TCP port, when the gateway is behind a static NAT or PAT
External Address	The external address (and optional TCP port) of the NAT. External Address = <code>hostname[:port]</code> specifies a static address[:port] to be used in SIP and SDP messages.Examples: External Address = <code>12.34.56.78</code> External Address = <code>12.34.56.78:9900</code>
External Hostname	The external hostname (and optional TCP port) of the NAT. External Hostname = <code>hostname[:port]</code> is similar to External Address. Examples: External Hostname = <code>foo.dyndns.net</code>
Hostname Refresh Interval	How often to perform a hostname lookup. This can be useful when your NAT device lets you choose the port mapping, but the IP address is dynamic. Beware, you might suffer from service disruption when the name server resolution fails.

RTP Settings

Options	Definition
Start of RTP Port Range	Start of range of port numbers to be used for RTP.
End of RTP port Range	End of range of port numbers to be used for RTP.
RTP Timeout	

Options	Definition
Strict RFC Interpretation	Check header tags, character conversion in URIs, and multiline headers for strict SIP compatibility(default is yes)
Send Compact Headers	Send compact SIP headers
SDP Owner	Allows you to change the username filed in the SDP owner string. This filed MUST NOT contain spaces.
Disallowed SIP Methods	The external hostname (and optional TCP port) of the NAT.
Shrink Caller ID	The shrinkcallerid function removes '(', ',', ')', non-trailing '.', and '-' not in square brackets. For example, the caller id value 555.5555 becomes 5555555 when this option is enabled. Disabling this option results in no modification of the caller id value, which is necessary when the caller id represents something that must be preserved. By default this option is on.
Maximum Registration Expiry	Maximum allowed time of incoming registrations and subscriptions (seconds).
Minimum Registration Expiry	Minimum length of registrations/subscriptions (default 60).
Default Registration Expiry	Default length of incoming/outgoing registration.
Registration Timeout	How often, in seconds, to retry registration calls. Default 20 seconds.
Number of Registration Attempts Enter '0' for unlimited	Number of registration attempts before we give up. 0 = continue forever, hammering the other server until it accepts the registration. Default is 0 tries, continue forever.

Security

Options	Definition
Match Auth Username	If available, match user entry using the 'username' field from the authentication line instead of the 'from' field.
Realm	Realm for digest authentication. Realms MUST be globally unique according to RFC 3261. Set this to your host name or domain name.
Use Domain as Realm	Use the domain from the SIP Domains setting as the realm. In this case, the realm will be based on the request 'to' or 'from' header and should match one of the domain. Otherwise, the configured 'realm' value will be used.
Always Auth Reject	When an incoming INVITE or REGISTER is to be rejected, for any reason, always reject with an identical response equivalent to valid username and invalid password/hash instead of letting the requester know whether there was a matching user or peer for their request. This reduces the ability of an attacker to scan for valid SIP usernames. This option is set to 'yes' by default.
Authenticate Options Requests	Enabling this option will authenticate OPTIONS requests just like INVITE requests are. By default this option is disabled.
Allow Guest Calling	Allow or reject guest calls (default is yes, to allow). If your gateway is connected to the Internet and you allow guest calls, you want to check which services you offer everyone out there, by enabling them in the default context.

Media

Options	Definition
Premature Media	Some ISDN links send empty media frames before the call is in ringing or progress state. The SIP channel will then send 183 indicating early media which will be empty - thus users get no ring signal. Setting this to "yes" will stop any media before we have call progress (meaning the SIP channel will not send 183 Session Progress for early media). Default is 'yes'. Also make sure that the SIP peer is configured with progressinband=never. In order for 'noanswer' applications to work, you need to run the progress() application in the priority before the app.

TOS for SIP Packets	Sets type of service for SIP packets
TOS for RTP Packets	Sets type of service for RTP packets

SIP ACCOUNT SECURITY

This gateway supports TLS protocol for encrypting calls. On the one hand, it can work as a TLS server and generate the session keys used for the secure connection. On the other hand, it can be registered as a client and upload the key files provided by the server.

TLS settings

▼ TLS Setting

TLS Enable:	<input checked="" type="checkbox"/>
TLS Verify Server:	<input checked="" type="checkbox"/>
Port:	<input type="text" value="5061"/>
TLS Client Method:	<input type="text" value="tlsv1"/>

▼ TLS keys

Type	Key Name	IP Address	Organization	Password	Operation
client ▼	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Create

▼ Key Files

Upload the pem file: 未选择任何文件

Upload the crt file: 未选择任何文件

File Name	File Size	Operation

Instruction of TLS

Options	Definition
TLS Enable	Enable or disable DTLS-SRTP support.
TLS Verify Server	Enable or disable tls verify server(default is no).
Port	Specify the port for remote connection.
TLS Client Method	Values include tlsv1, sslv3, sslv2, Specify protocol for outbound client connections, default is sslv2.

ROUTING

This gateway supports up to 512 routing rules and about 100 pairs of calleeID/callerID manipulations can be set in a rule. It supports DID functions as well as trunk group and trunk priority management.

Call Routing Rules

<input type="checkbox"/>	Move	Order	Rule Name	From	To	Actions
<input type="checkbox"/>		2	test	8006	4	
<input type="checkbox"/>		1	outbound	soft phone	9000	
<input type="checkbox"/>		3	out_test	9004	9005	
<input type="checkbox"/>		4	inbound	9000	soft phone	

You can set up a new routing rule by and once the routing rules are set, you can reorganize the rules' order by drag and drop. Click button to edit the routing and to delete it. Finally, click the button to save what you set. will show current routing rules.

Here is an example for routing rules number conversion, it transforms calling, and called number at the same time. Suppose you want the eleven numbers with the 159 prefix to call the eleven numbers with the 136 prefix. Calling transform deletes the three numbers from left, then writing number 086 as the prefix, deletes the last four numbers, and then adds number 0755 at the end, it will show caller name is China Telecom. Called transform adds 086 as prefix, and changes the last two numbers to 88.

processing rules	prepend	prefix	Match pattern	SdfR	StA	RdfR	Caller Name
Calling Transformation	086	159	xxxxxxxx	4	0755		China telecom
Called transformation	086	136	xxxxxxx	2	88		N/A

Click button to set up your routings.

Example of Setup Routing Rule

Create a Call Routing Rule

Call Routing Rule

Routing Name: support

Call Comes in From: fso-1

Send Call Through: soft phone

DKSA Settings

Authentication: OFF

Advance Routing Rule

Cid Number Settings

Cid Number:

Save Cancel

The figure above realizes that calls from "support" SIP endpoint switch you have registered will be transferred to Port-1. When "Call Comes in from" is 1001, "prepend", "prefix" and "match pattern" in "Advanced Routing Rule" are ineffective, and just "CallerID" option is available.

Definition of Call Routing Rule

Options	Definition
Routing Name	The name of this route. Should be used to describe what types of calls this route matches (for example, 'SIP2GSM' or 'GSM2SIP').
Call Comes in From	The launching point of incoming calls.
Send Call Through	The destination to receive the incoming calls.

Advance Routing Rule

Advance Routing Rule

CallerID/callerID Manipulation

Caller_Dial_pattern [Prepend] Prefix Match Pattern SDRS SA Staff

Caller_Dial_pattern [Prepend] Prefix Match Pattern SDRS SA Staff Caller Name Modify CallerID

+ Add More Dial Pattern Fields

Time Patterns that will use this Route

Time to start Week Day start Month Day start Month start

Time to finish Week Day finish Month Day finish Month finish

+ Add More Time Pattern Fields

Change Rules

Forward Number

Fallover Call Through Number

Add a Fallover Call Through Provider

Definition of Advance Routing Rule

Options	Definition
CallerID/callerID Manipulation	<p>A Dial Pattern is a unique set of digits that will select this route and send the call to the designated trunks. If a dialed pattern matches this route, no subsequent routes will be tried. If Time Groups are enabled, subsequent routes will be checked for matches outside of the designated time(s).</p> <p>X matches any digit from 0-9 Z matches any digit from 1-9 N matches any digit from 2-9 [1237-9] matches any digit in the brackets (example: 1,2,3,7,8,9) . wildcard, matches one or more dialed digits</p> <p>Prepend: Digits to prepend to a successful match. If the dialed number matches the patterns specified by the subsequent columns, then this will be prepended before sending to the trunks.</p> <p>Prefix: Prefix to remove on a successful match. The dialed number is compared to this and the subsequent columns for a match. Upon a match, this prefix is removed from the dialed number before sending it to the trunks.</p> <p>Match Pattern: The dialed number will be compared against the prefix + this match pattern. Upon a match, the match pattern portion of the dialed number will be sent to the trunks.</p> <p>SDfR(Stripped Digits from Right): The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted.</p> <p>RDfR(Reserved Digits from Right): The amount of digits to be reserved from the right end of the number. If the value of this item under the length of the current number, the whole number will be reserved.</p> <p>StA(Suffix to Add): Designated information to be added to the right end of the current number.</p> <p>Caller Name: What caller name would you like to set before sending this call to the endpoint.</p> <p>Disabled Caller Number Change : Disable the caller number change, and fixed caller number match pattern.</p>
Time Patterns that will use this Route	Time Patterns that will use this Route help
Forward Number	What destination number will you dial? This is very useful when you have a transfer call.
Failover Call Through Number	The gateway will attempt to send the call out each of these in the order you specify.

Groups

This gateway allows you to combine many Ports or SIP to groups. Then if you want to make a call, it will find an available port automatically.

Definition of Routing Groups

Options	Definition
Group Name	The mean of this route. Should be used to describe what types of calls this route match (for example, 'sip1 TO port1' or 'port1 To sip2').

Batch Create Rules

If you bind telephone for each FXO port and want to establish separate call routings for them. For convenience, you can batch create call routing rules for each FXO port at once in this page.

NETWORK

On "Network" page, there are "Network Settings", "VPN Settings", "DDNS Settings", and "Toolkit".

Network Settings

There are three types of LAN port IP, Factory, Static and DHCP. Factory is the default type, and it is 172.16.99.1.

When you Choose LAN IPv4 type is "Factory", this page is not editable.

A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.

LAN SETTINGS INTERFACE

Definition of Network Settings

Options	Definition
Interface	The name of network interface.
Type	The method to get IP. Factory: Getting IP address by Slot Number (System information to check slot number). Static: manually set up your gateway IP. DHCP: automatically get IP from your local LAN.
MAC	Physical address of your network interface.
Address	The IP address of your gateway.
Netmask	The subnet mask of your gateway.
Default Gateway	Default gateway IP address.
Reserved Access IP	A reserved IP address to access in case your gateway IP is not available. Remember to set a similar network segment with the following address of your local PC.
Enable	A switch to enable the reserved IP address or not. ON(enabled), OFF(disabled)
Reserved Address	The reserved IP address for this gateway.
Reserved Netmask	The subnet mask of the reserved IP address.

Basically, this info is from your local network service provider, and you can fill in four DNS servers.

DNS INTERFACE

Definition of DNS Settings

Options	Definition
DNS Servers	A list of DNS IP address. Basically this info is from your local network service provider.

VPN SETTINGS

You can upload the VPN client configuration, if successful, you can see a VPN virtual network card on SYSTEM status page. About the configuration format you can refer to the Notice and Sample configuration.

VPN INTERFACE

DDNS Settings

You can enable or disable DDNS (dynamic domain name server).

Options	Definition
DDNS	Enable/Disable DDNS(dynamic domain name server)
Type	Set the type of DDNS server.
Username	Your DDNS account's login name.
Password	Your DDNS account's password.
Your domain	The domain to which your web server will belong.

TOOLKIT

Used to check network connectivity. Support Ping command on web GUI.

Definition of Channel Recording

Options	Definition
Interface	The name of network interface.
Source host	Capture the data of source host you specified
Destination host	Capture the data of destination host you specified
Port	Capture the data of port you specified
Channel	Capture the data of channel you specified
Tcpdump Option Parameter	The tool of tcpdump capture network data by parameter option specified.

ADVANCED

Asterisk API

You need to switch on the "Enable" option for this page to be available.

Definition of Asterisk API

Options	Definition
Port	Network port number
Manager Name	Name of the manager without space
Manager secret	Password for the manager. Characters: Allowed characters "-_+.<>&0-9a-zA-Z". Length:4-32 characters.
Deny	If you want to deny many hosts or networks, use char & as separator. Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.255.0&10.0.0.0/255.0.0.0

Permit	If you want to permit many hosts or network, use char & as separator. Example: 0.0.0.0/0.0.0.0 or 192.168.1.0/255.255.255.0&10.0.0.0/255.0.0.0
System	General information about the system and ability to run system management commands, such as Shutdown, Restart, and Reload.
Call	Information about channels and ability to set information in a running channel.
Log	Logging information. Read-only. (Defined but not yet used.)
Verbose	Verbose information. Read-only. (Defined but not yet used.)
Command	Permission to run CLI commands. Write-only.
Agent	Information about queues and agents and ability to add queue members to a queue.
User	Permission to send and receive UserEvent.
Config	Ability to read and write configuration files.
DTMF	Receive DTMF events. Read-only.
Reporting	Ability to get information about the system.
CDR	Output of cdr, manager, if loaded. Read-only.
Dialplan	Receive NewExten and Varset events. Read-only.
Originate	Permission to originate new calls. Write-only.
All	Select all or deselect all.

Once you set like the above figure, the host 172.16.80.16/255.255.0.0 is allowed to access the gateway API. Please refer to the following figure to access the gateway API by putty. 172.16.80.16 is the gateway's IP, and 5038 is its API port.

ASTERISK CLI

In this page, you are allowed to run Asterisk commands.

Definition of Asterisk API

Options	Definition
Command	Type your Asterisk CLI commands here to check or debug your gateway.

If you type "help" or "?" and execute it, the page will show you the executable commands.

ASTERISK FILE EDITOR

On this page, you are allowed to edit and create configuration files.

Click the file to edit.

Configuration Files List

Click "New Configuration File" to create a new configuration file. After editing or creating, please reload Asterisk.

LOGS

Log Settings

On the "Log Settings" page, you should set the related logs on to scan the responding logs page. For example, set "System Logs" as the following, then you can turn to "System" page for system logs, otherwise, system logs are unavailable. And the same with other log pages.

Definition of LOG

Options	Definition
System Logs	Whether enable or disable system log.

<p>Auto clean (System Logs)</p>	<p>switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, max size=1MB.</p>
<p>Verbose</p>	<p>Asterisk console verbose message switch.</p>
<p>Notice</p>	<p>Asterisk console notice message switch.</p>
<p>Warning</p>	<p>Asterisk console warning message switch.</p>
<p>Debug</p>	<p>Asterisk console debug message switch.</p>
<p>Error</p>	<p>Asterisk console error message switch.</p>
<p>DTMF</p>	<p>Asterisk console DTMF info switch.</p>
<p>Auto clean: (asterisk logs)</p>	<p>switch on : when the size of log file reaches the max size, the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, max size=100KB.</p>
<p>SIP Logs:</p>	<p>Whether enable or disable SIP log.</p>
<p>Auto clean: (SIP logs)</p>	<p>switch on : when the size of log file reaches the max size,the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, default size=100KB.</p>
<p>Call Detail Record</p>	<p>Displaying Call Detail Records for each channel.</p>
<p>Auto clean: (Call Detail Record)</p>	<p>switch on : when the size of log file reaches the max size,the system will cut a half of the file. New logs will be retained. switch off : logs will remain, and the file size will increase gradually. default on, default size=20MB.</p>

SYSTEM

System Logs Output

Note: The same to Asterisk Logs and SIP Logs.

CDR

You can scan every call detail records in this page. We also provide the filter for you to search some specific records.